




T-SLOT DOUBLE V-GROOVE GATE W/2.5" FRAME


Installation Kit - Instructions



SKU	COLOR
61123643	BEIGE
61123644	BLACK
61123645	FLORIDA BRONZE
61123646	GREEN
61123647	GRAY
61123648	LIGHT BRONZE
61118982	MATTE BLACK
61123649	MILL
61118983	MATTE BRONZE
61123650	WHITE

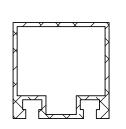

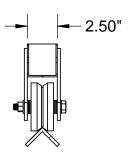






ITEM#	PART#				DESCRIPTION	QTY
1	34110658				T-SLOT DOUBLE V-GROOVE GATE W/2.5" FRAME - INSTRUCTIONS	1
2	61123633				T-SLOT SINGLE V-GROOVE GATE W/2.5" FRAME - HARDWARE KIT	2
3	34110217				HARDWARE KIT - V-GROOVE WHEEL	2
4	61123634				HARDWARE KIT - T-SLOT RECEIVER 2.5" FRAME	1
	61111205	BG	61111210	LB	T-SLOT SIDE GUIDE BRACKET	
	61111206	BK	61119099	MB		
5	61111207	BZ	61111211	MF		2
	61111208	GR	61119100	MZ		
	61111209	GY	61111212	WH		
	61123591	BG	61123596	LB	T-SLOT RECEIVER DBL 2.5" FRAME	
	61123592	BK	61118430	MB		
6	61123593	BZ	61123597	MF		1
	61123594	GR	61118431	MZ		
	61123595	GY	61123598	WH		
	61123583	BG	61123588	LB		
	61123584	BK	61118432	MB		
7	61123585	BZ	61123589	MF	T-SLOT RECEIVER GATE 2.5" FRAME	1
	61123586	GR	61118433	MZ		
	61123587	GY	61123590	WH		
8	34110287				1.43" DIA. DERLIN GUIDE WHEEL	2
9	34110341				GREASE 3 OZ.	1
10	34110253				1/2"-13X1 1/2" SQ HD BOLT ZINC GRADE 5	4
11	34110251				1/2" SPLIT LOCK WASHER ZINC	4
12	34110252				1/2"-13 HEX NUT ZINC	5
13	34110257				5/8" SHOULDER BOLT 1" LONG STEEL	1
14	34110215				NYLON WASHER .08X1.25X.75 ID	1
15	34110659				1/2"-13X4" HX HD BOLT ZINC GRD5 PART THREAD	2
16	34110390				1/2" FLAT WASHER 18-8 SS	12
17	34110614				3/8"-16X3.5" CARRIAGE BOLT ZINC GRADE A307	2
18	34110107				3/8"-16 HEX NUT ZINC	2
19	34110281				3/8" WASHER ZINC	2
20	73022415				SCREW #14X1-1/2 HX HD SDS 410 SS	5

NOTE:

- 1.) ITEM #10 TO #16 IS PART OF 61123633 HARDWARE KIT (ITEM 2)
- 2.) ITEM #17 TO #20 IS PART OF 61123634 HARDWARE KIT (ITEM 4)
- 3.) FOR MATTE BLACK KITS USE BLACK SCREWS
- 4.) FOR MATTE BRONZE KITS USE LIGHT BRONZE SCREWS

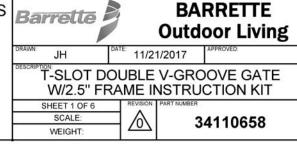


INSTALLATION PROCEDURE:


- 1.SET 4" POSTS IN THE GROUND SEE POST LOCATION BELOW.
- 2.INSTALL V-GROOVE WHEELS (ITEM #3) AND EXTRA WASHERS AS SPACERS (ITEM #16 3 PER SIDE) ON THE GATE SEE SHEET 3
- 3.INSTALL TOP BRACKET (ITEM #5) AND GUIDE WHEEL (ITEM #8) SEE SHEET 4
- 4.PLACE GATE IN THE POSITION SLIDE UPPER ROLLER GUIDE ON GUIDE WHEEL (ITEM #8) SEE SHEET 5
- 5.INSTALL POST RECEIVER (ITEM #6) AND GATE RECEIVER (ITEM #7) SEE SHEET 6


NOTE:

- APPLY GREASE (ITEM #9) ON THE SHOULDER BOLTS (ITEM #13), INSIDE GUIDE WHEELS (ITEM # 8) AND TOP OF NYLON WASHER (ITEM #14). MAINTAIN GREASE EVERY 4 TO 6 MONTHS.

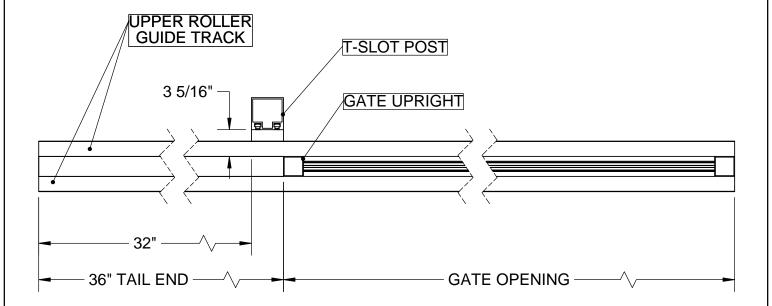



POST LOCATION DETAIL SCALE 1:12

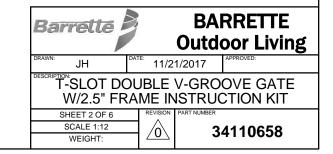


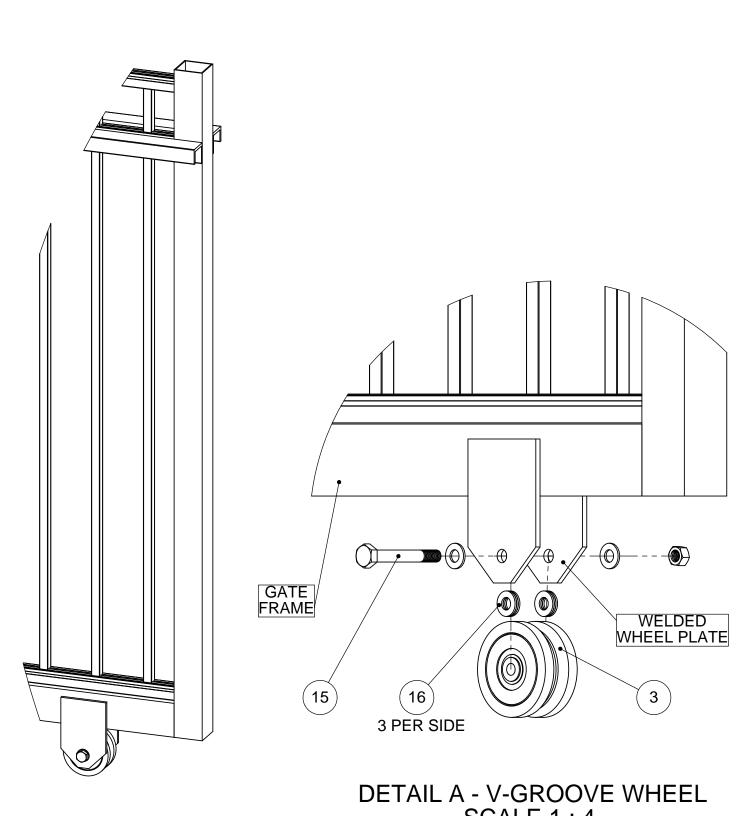


SCALE 1:4

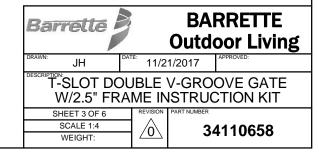


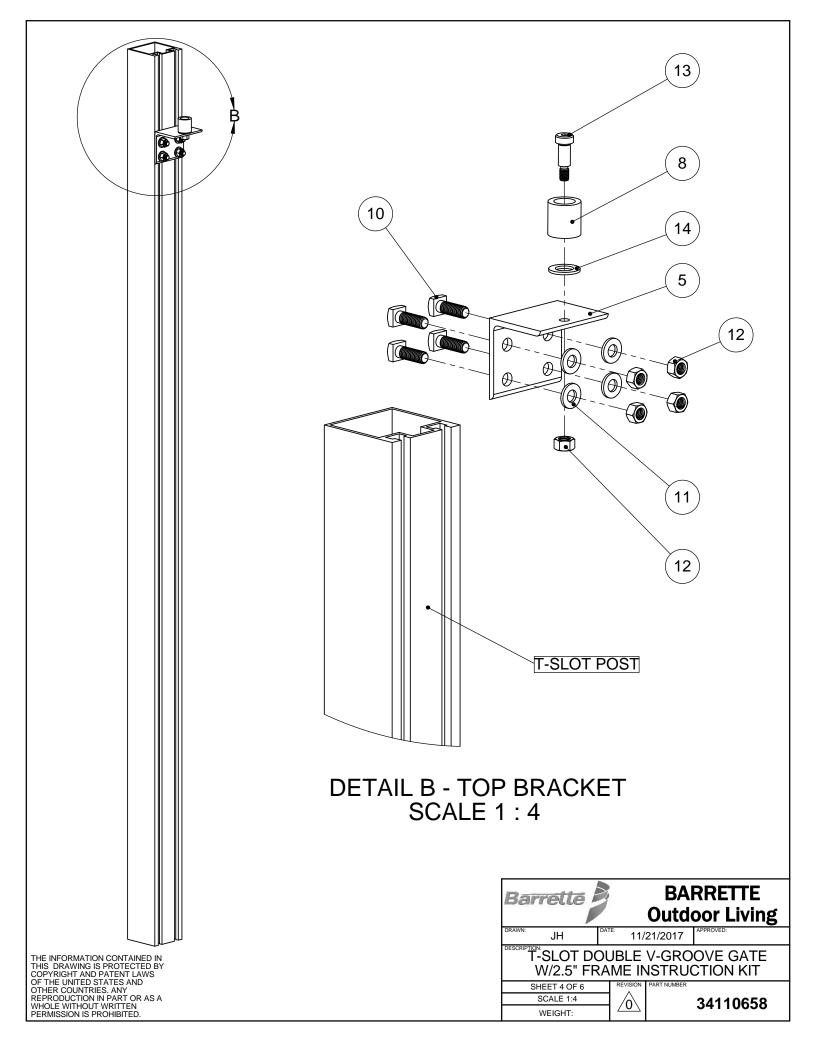


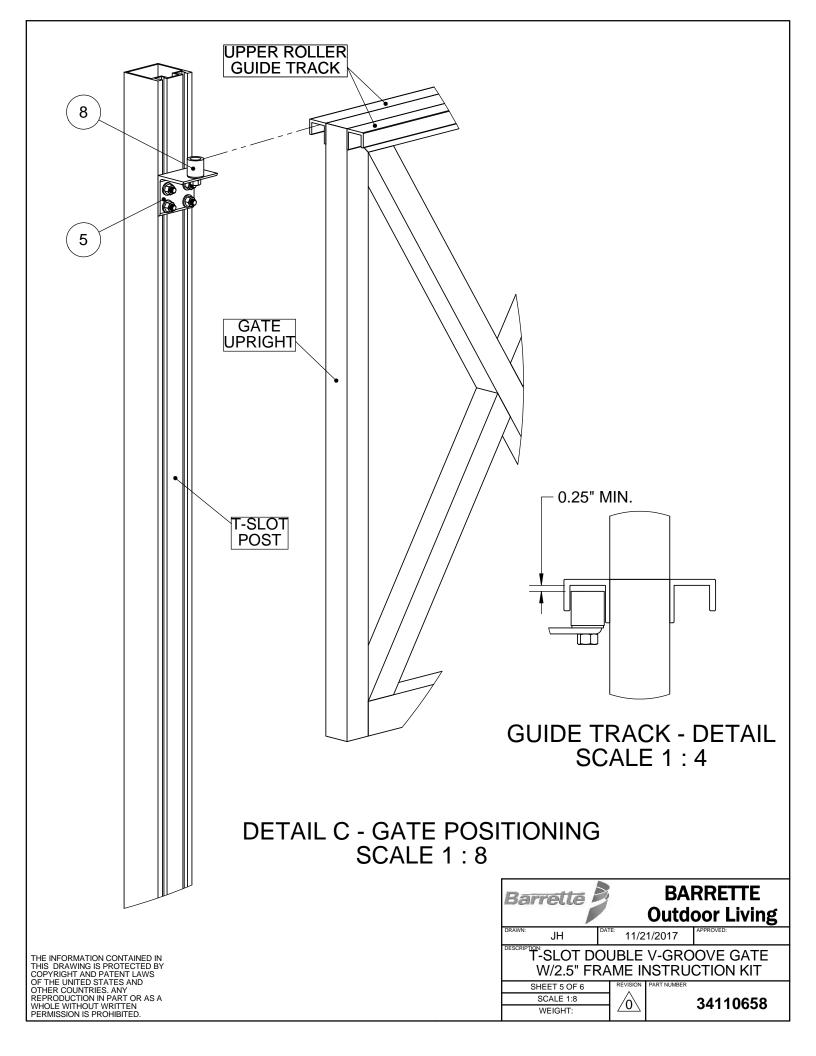

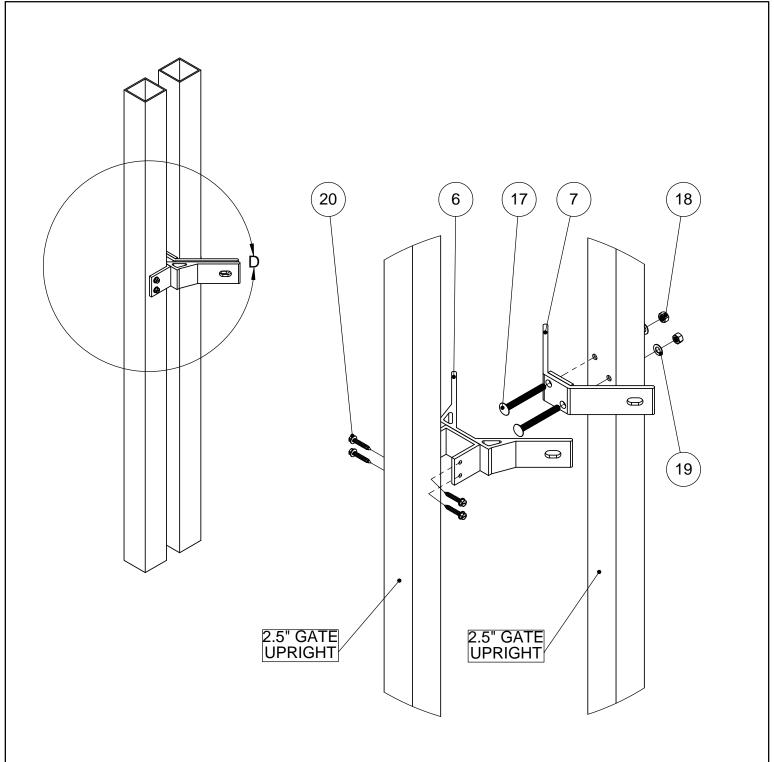



DETAIL D - RECEIVER SCALE 1:6

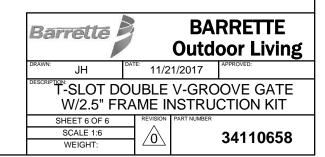

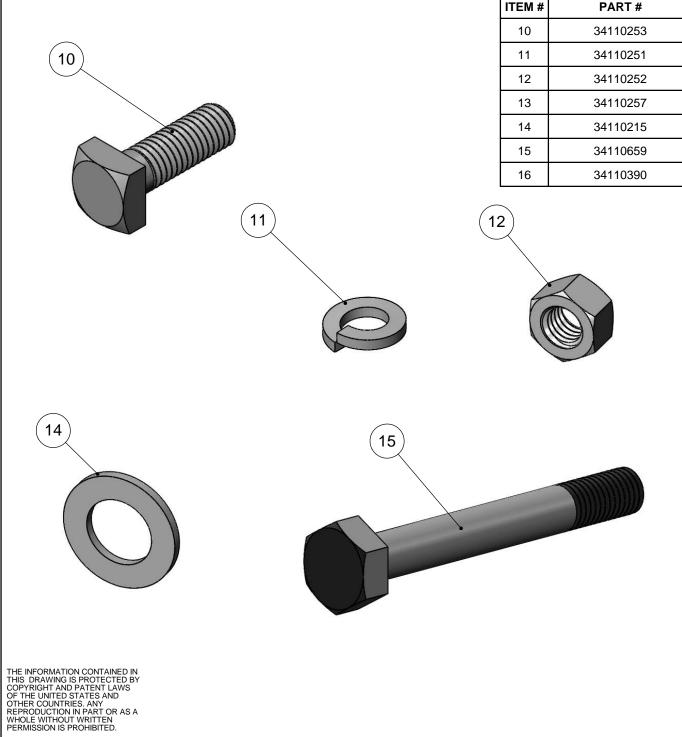



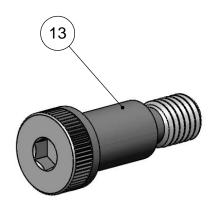

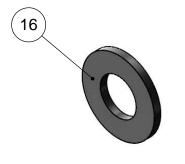



BARRETTE Outdoor Living

11/21/2017

/0\

T-SLOT SINGLE V-GROOVE GATE HARDWARE KIT 2.5"

SHEET 1 OF 1 SCALE 1:1 WEIGHT:

61123633

ITEM#	PART#	DESCRIPTION	QTY
17	34110614	3/8"-16x3.5" CARRIAGE BOLT ZINC GRADE A307	2
18	34110107	3/8"-16 HEX NUT ZINC	2
19	34110281	3/8" WASHER ZINC	2
20	73022415	SCREW #14X1-1/2 HX HD SDS 410 SS	5

